

DIEGEM

valnott®




1

2

3



BROCA 6MM

6MM BIT

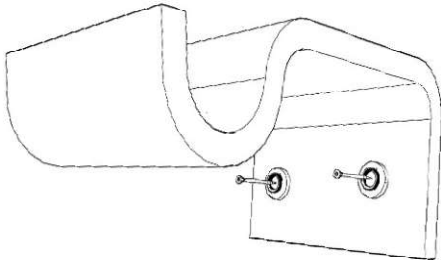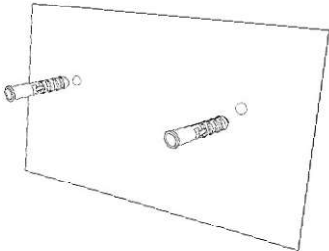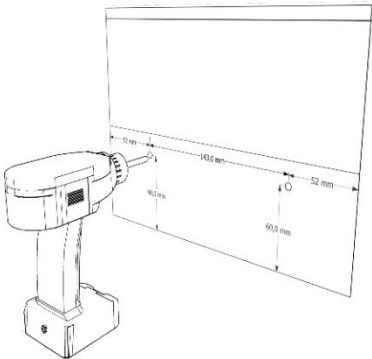


4

5

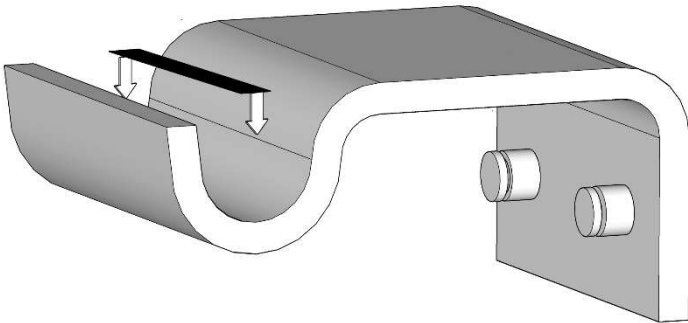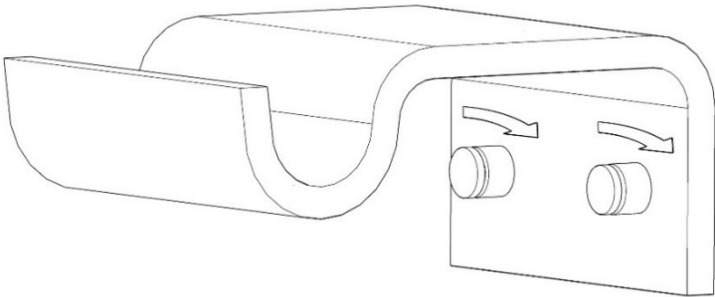

INSTRUCCIONES MONTAJE

ASSEMBLY INSTRUCTIONS

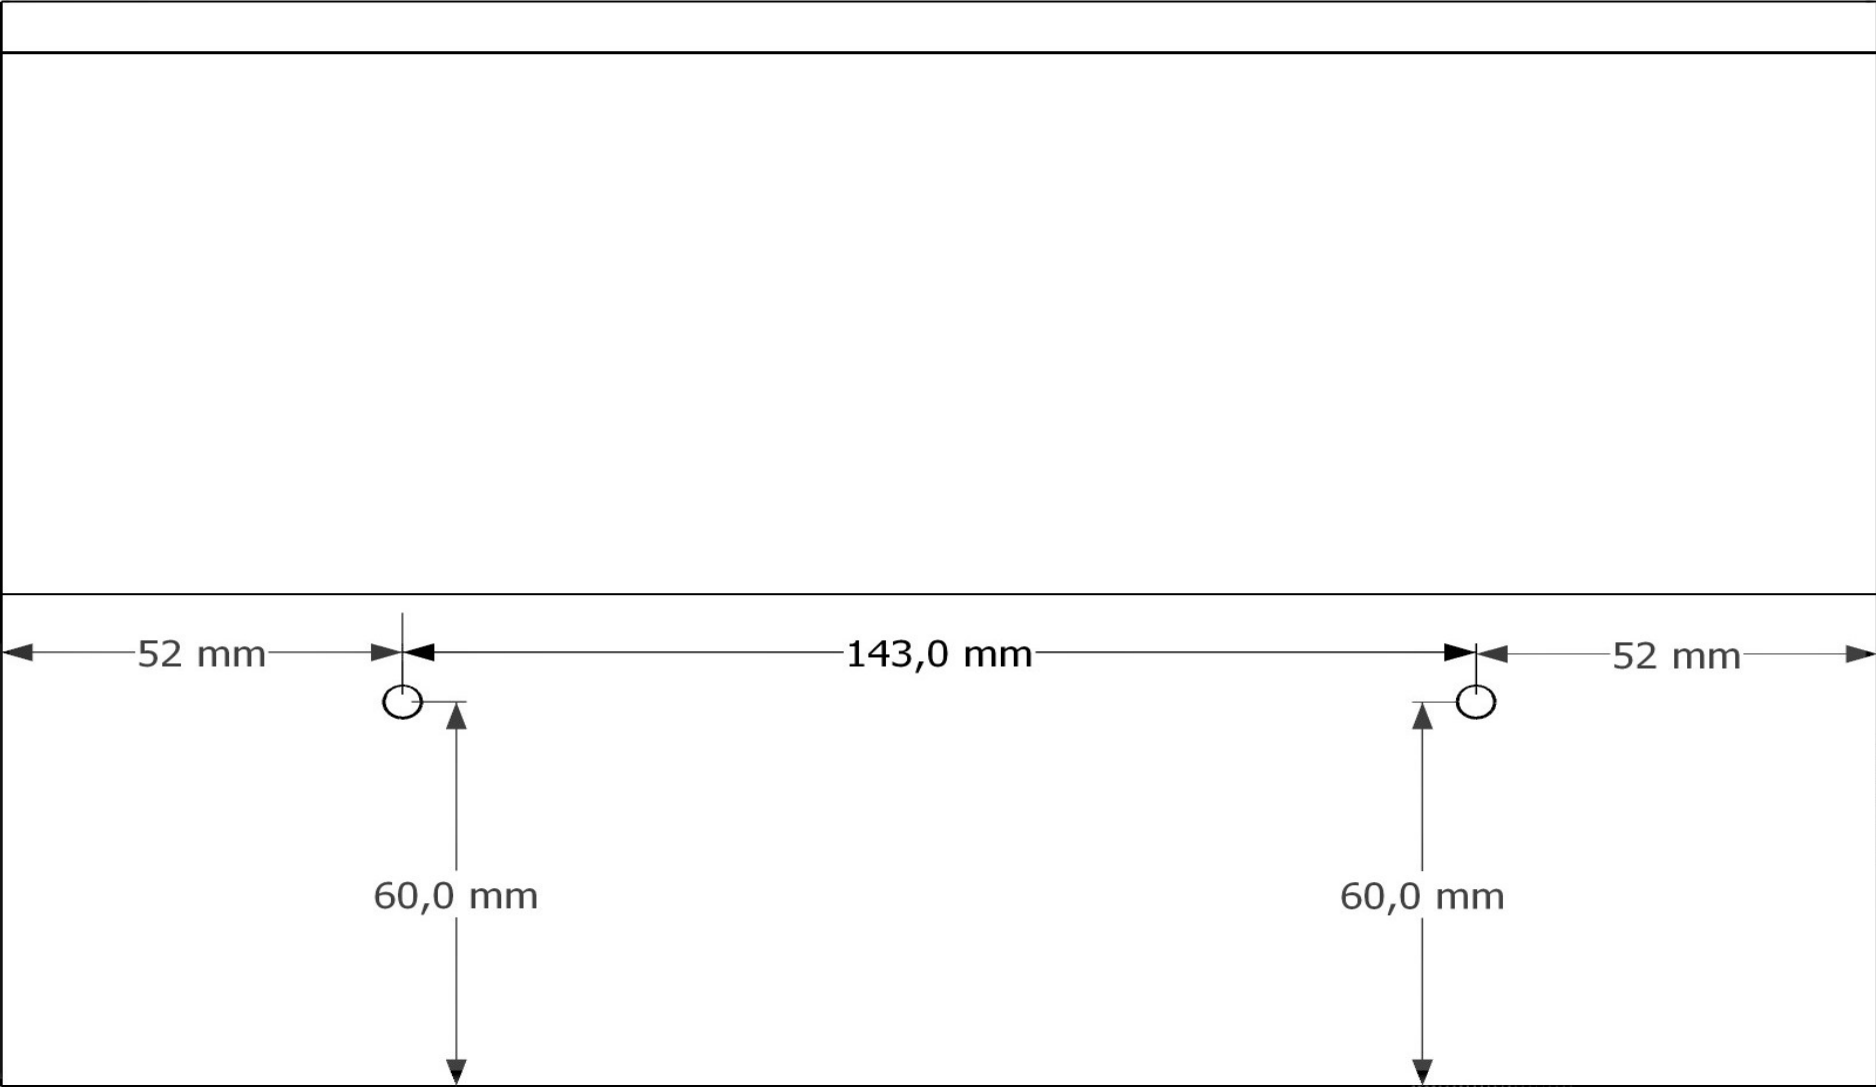

PLANTILLA MONTAJE

ASSEMBLY TEMPLATE

